

Huawei HG532f – 3G/LTE failover

1. Log into the modem's web interface by entering 10.0.0.2 in the address bar of an Internet browser. The default username and password are *admin* and *admin*.
2. Click on Basic and then WAN.
3. Click on INTERNET_R_UMTS1 in the WAN connection table at the top of the page.

Home Gateway

Basic > WAN > WAN

WAN Uplink Switch

Name	Connection Type	IP Type	Enable	Remove
INTERNET_TR069_R_8_35	PPPoE	IPv4	Enable	<input type="checkbox"/>
Other_R_8_35	PPPoE	IPv4	Enable	<input type="checkbox"/>
INTERNET_R_UMTS1	PPP		Enable	<input type="checkbox"/>

INTERNET_R_UMTS1

WAN connection: Enable

Service list: INTERNET

Connection type: PPP

MRU: 1492

MSS: 0

IP type: IPv4

PPPoE type: Dynamic PPP

PPPoE Pass Through: Enable

NAT: NAPT

Firewall level: Low

Authentication mode: Auto

Connection trigger: AlwaysOn

User name:

Password:

APN: internet

Dial number: *99#

Submit

4. Change the APN setting to TelkomInternet.
5. Click the Submit button.