

Netgear VEVG2660-1TKSAS – 3G/LTE failover

1. Log into the modem's web interface by entering 10.0.0.2 in the address bar of an Internet browser. The default username and password are *admin* and *admin*.
2. Click on the Advanced tab at the top of the page.
3. Click on Settings and then Mobile Broadband Settings.
4. If a supported 3G/LTE dongle is connected, then you will see the following configuration page:

The screenshot shows the Netgear VEVG2660-1TKSAS web interface. The browser address bar shows 10.0.0.2/start.htm. The page title is 'Telkom NETGEAR genie' and 'VEVG2660'. The 'ADVANCED' tab is selected, and the 'Mobile Broadband Settings' section is active. The 'USB Wireless Broadband modem settings' section is expanded, showing fields for Country (South Africa), Internet Service Provider (Telkom Mobile), Access Number (*99#), and APN (internet). The PDP Type is set to IP. There are checkboxes for 'Connect automatically at startup', 'Reconnect automatically When connection is lost', and 'Roaming automatically'. The connection status is 'Not Connected'.

5. Click on the Internet Service Provider drop-down list and select Telkom.
6. Type "TelkomInternet" on APN field
7. Click the Apply button at the top of the page.