



## How to setup D-Link DWM – 157

1. Click on Options
2. Select all boxes
3. Click on Profile Management

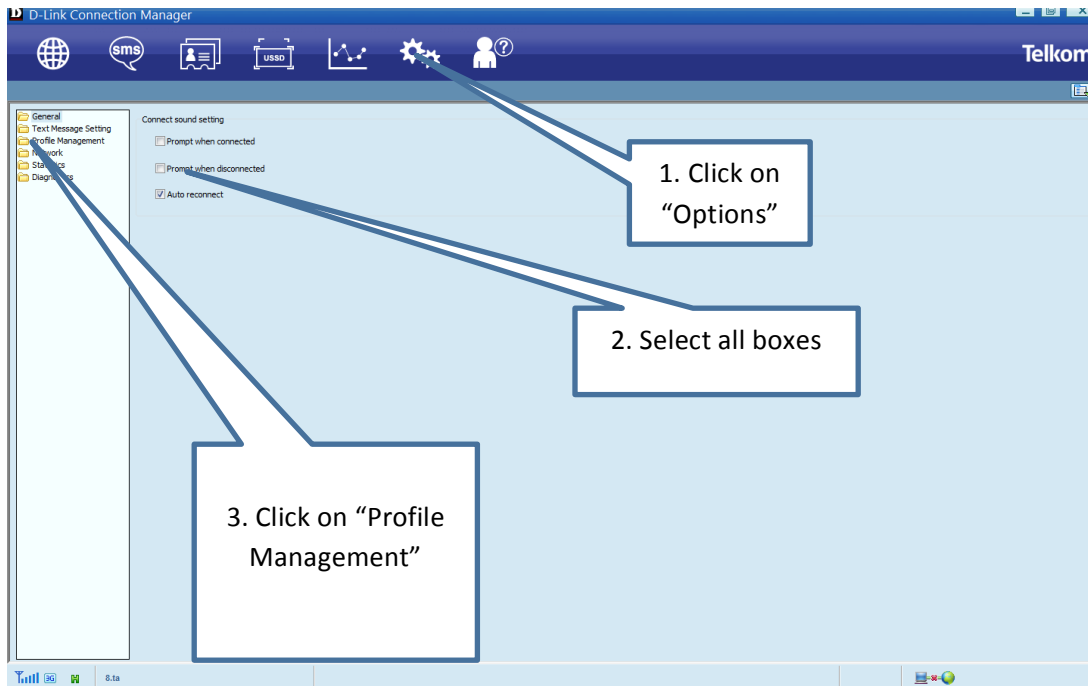


4. Type "TelkomInternet" on both profile name and APN
5. Type "\*99#" on Access number
6. Click on "Save"

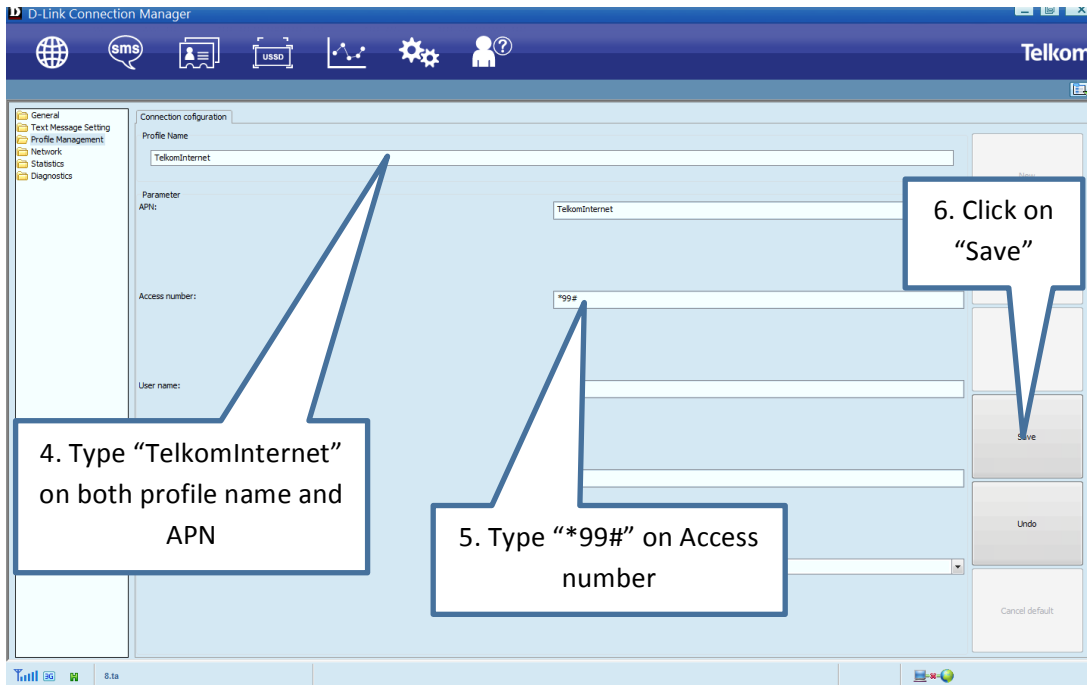


7. Click on "Set as default" Click on "Set as

8. Click on "Connection"

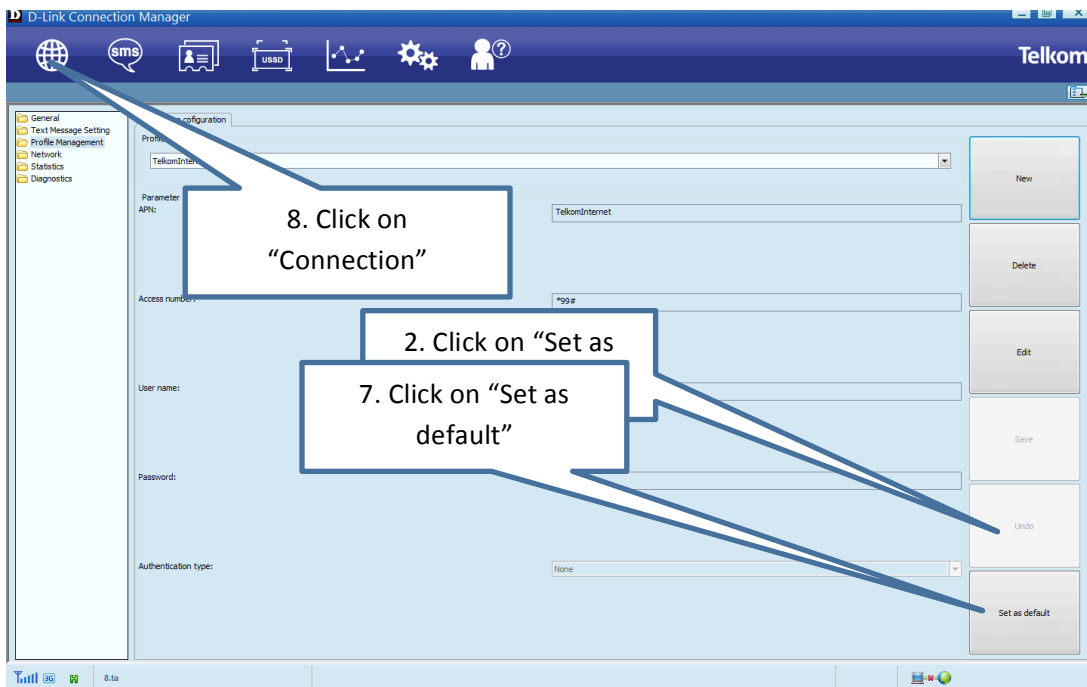

9. Click on "Connect"

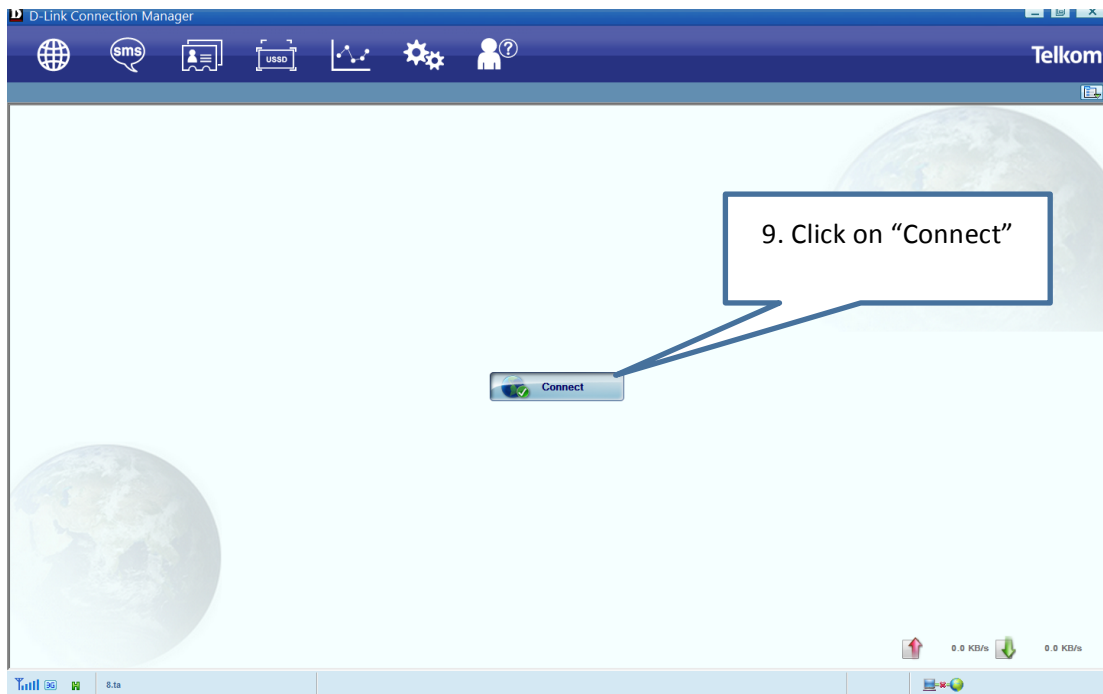

You can now browse the internet...